

1905 Floor Stand

1. Undo clamp (1) and lower **foot assembly** to the bottom of the **lower stand** as shown. Lock clamp (1). Pull all three feet outward in a star shape. The stand is now free-standing.
2. Take a firm grip of hand clamp (2) and twist anti-clockwise to extend or retract the **upper stand**. Twist the hand clamp clockwise to lock the stand at the correct height.
3. To adjust the angle of the **boom arm**, unscrew clamp (3) and adjust angle as required.
4. To adjust the length of the boom arm back and forth, undo thumb screw (4) and adjust. Retighten as necessary.
5. A ferrule (5) is included to allow fitment of most microphone clamps.

MICROPHONE CLAMPS ARE SUPPLIED WITH OUR 1918 AND 1808 MICROPHONES.


The Coomber microphone clamp will attach to the boom arm using the ferrule supplied.

1912 Desk Stand

1. Screw spindle to cast base.

2. Attach microphone clamp.

Screw finger tight +1/8th turn as shown below.

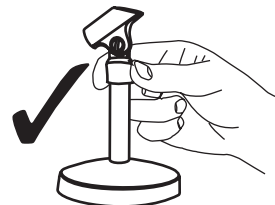


PLASTIC PARTS WILL BREAK IF FORCED!



MICROPHONE CLAMPS ARE SUPPLIED WITH OUR 1918 AND 1808 MICS.

The Coomber microphone clamp will attach directly to the spindle without the need of a ferrule.

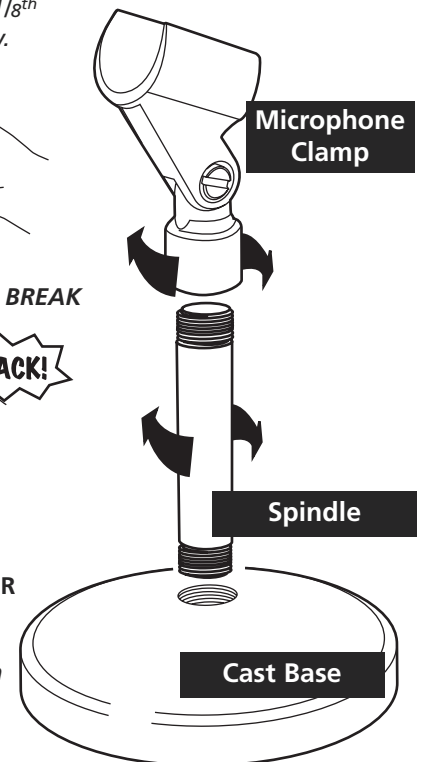

1912 Desk Stand



1943 Adjustable Jaw Clamp

This handy Coomber accessory can be used with most microphones - including radio mics.