

### 1905 Floor Stand


1. Undo clamp (1) and lower **foot assembly** to the bottom of the **lower stand** as shown. Lock clamp (1). Pull all three feet outward in a star shape. The stand is now free-standing.
2. Take a firm grip of hand clamp (2) and twist anti-clockwise to extend or retract the **upper stand**. Twist the hand clamp clockwise to lock the stand at the correct height.
3. To adjust the angle of the **boom arm**, unscrew clamp (3) and adjust angle as required.
4. To adjust the length of the boom arm back and forth, undo thumb screw (4) and adjust. Retighten as necessary.
5. A ferrule (5) is included

### 1912 Desk Stand

1. Screw spindle to cast base.
2. Attach microphone clamp.  
*Screw finger tight + 1/8<sup>th</sup> turn as shown below.*



PLASTIC PARTS WILL BREAK IF FORCED!

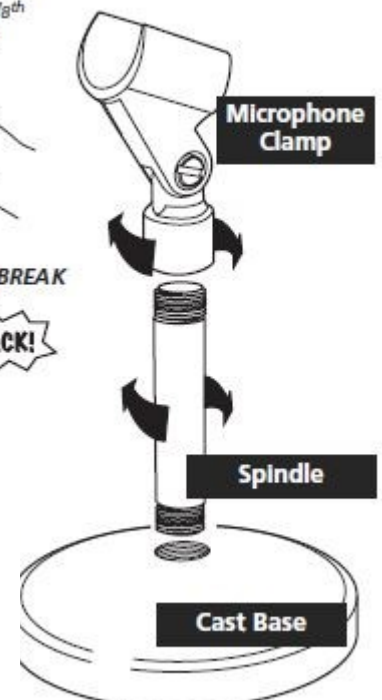

1912 Desk Stand