


Your new Coomber

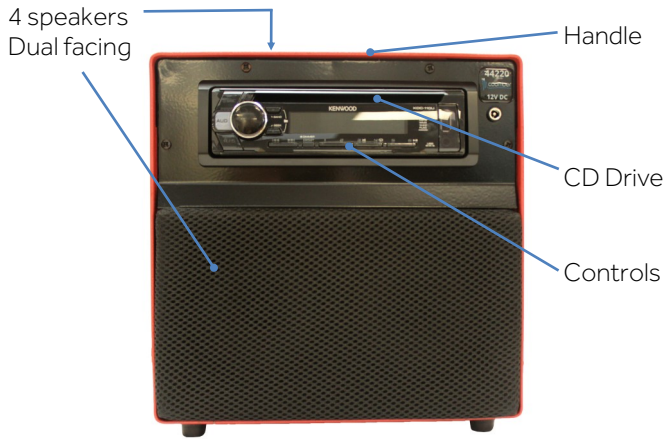

Included in the box



AC/DC Power supply unit
1858-12V or 15V Max



41244 iPod lead

Power connection

12V or 15V
DC in from
1858 PSU



- First always connect the external power supply to the **DC in**.
- Then plug the PSU to the **mains** supply
- Switch on power to the unit.

Connecting an iPod or External audio device

- Using suitable cables such as (Coomber part no 41244) 3.5mm jack plug lead connect the **headphone output** of the external device (iPod/phone) to the line in on CD paler.
- Please refer to separate CD instructions for more information.

Volume & Balance control

Please see the separate instruction supplied with this unit

Playing a CD/USB/SD Card

- Always adjust volume control to minimum before playing.

See Website for Full Safety Information

- Do not use in confined space.
- **This unit requires 12 or 15V DC only**
- All Coomber equipment is covered by a 12 months warranty against defective components or faulty manufacture from date of dispatch.
- Any modifications to or misuse of the equipment renders this warranty void.
- Equipment that is security marked or damaged cannot, under any circumstances, be exchanged.
- We reserve the right to change products and specifications without notice.