

Your new Coomber



Keypad

Included in the box



2 x Batteries

Accessorise your Coomber

We also produce a comprehensive range of accessories that can help you get more from your Coomber:



41821 blue skin



41330 headphones




41822 red skin

Please contact Coomber to place your order now!

Connecting to your Coomber


Microphones
Speak into here from 4-5" (100-125mm)

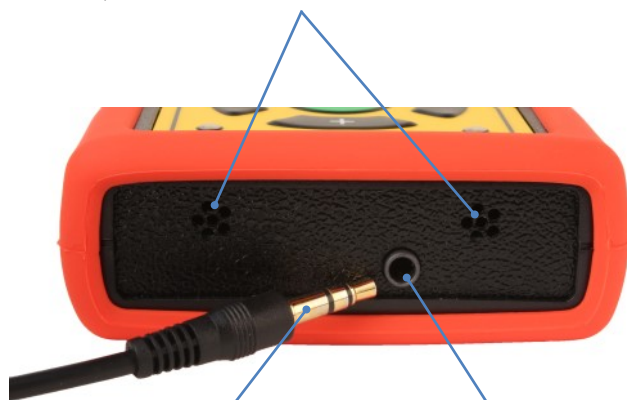

Headphone with a 3.5mm

Headphone output
Can also be used for
Aux out to an amplifier.

Controlling your Coomber

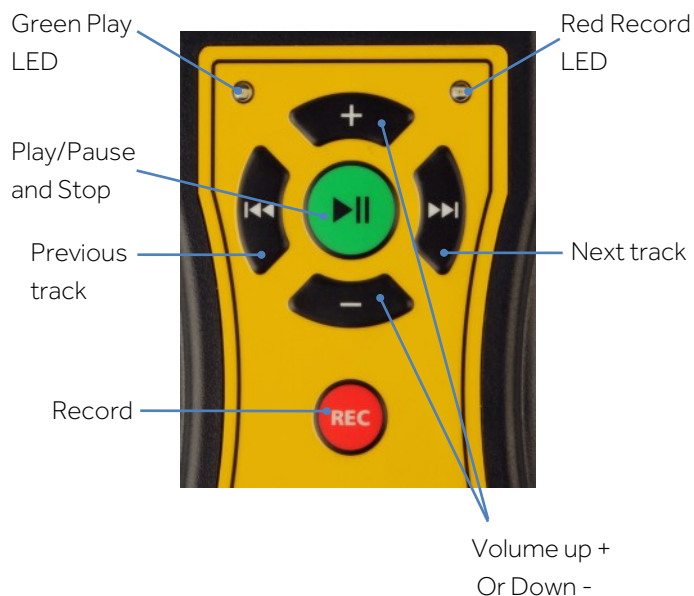

Power connection



1. Remove the protective skin.
2. Slide down the battery compartment cover
3. place the 2 AA batteries in the back of your recorder.

Battery compartment

Deleting memory content



1. Press both **A** buttons together, the **LEDs** will flash.
2. Then press both **B** buttons to erase the memory

Leave the unit for 4 seconds during step 1 to cancel the erase action, Once step two has been initiated the data cannot be recovered.

Playing & Recording

To record either of the following methods can be used.

- Press and hold the record button, release it to stop, or
- Press and release the record button, then when finished recording press record or play button to stop.
- While recording the **red LED** will be on.
- While playing the **green LED** will be on
- While in pause the **green LED** will flash.
- While in play mode press the play button briefly to pause the playback,.
- While in play press & hold the play button to stop the playback.
- While in play previous & next button will skip through the track being played.
- While stopped previous & next button will skip whole tracks.
- Up to 99 tracks can be recorded.

Please note If the **red LED** is permanently on there is a fault with the memory card please contact Coomber.

Volume

- Use the **+** and **-** button to change volume up & down.
- Fitting or charging the batteries will reset the volume to the default level.
- At all other times the volume setting will be remembered.
- The volume cannot be changed during recording or card erasure.

See Website for Full Safety Information

- All Coomber equipment is covered by a 12 months warranty against defective components or faulty manufacture from date of dispatch.
- Any modifications to or misuse of the equipment renders this warranty void.
- Equipment that is security marked or damaged cannot, under any circumstances, be exchanged.
- We reserve the right to change products and specifications without notice.