

 
Supplementary Instruction: "Fixing" CDs

Coomber


All 'Real Time' Recorder models

We often get asked how to fix a CD for playback on an ordinary CD player.


The answer is to always eject your CD from the drive using the appropriate eject button as shown below.

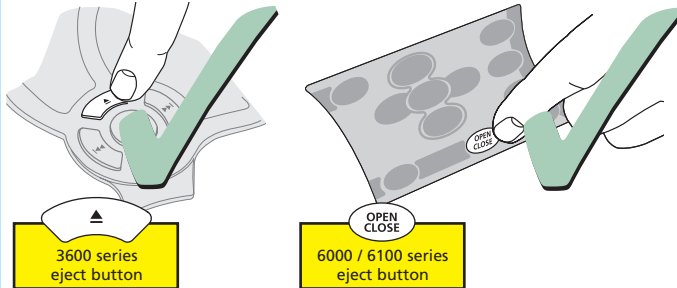

DO NOT USE THE DRIVE BUTTON TO EJECT A CD.
Otherwise, you will NOT be given the option to "fix" the CD.

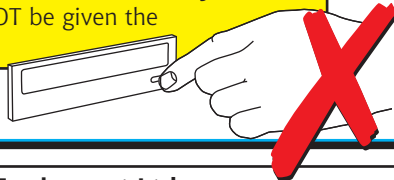

When ejecting a recordable CD-R or CD-RW using the appropriate button the screen will display a message (shown right).

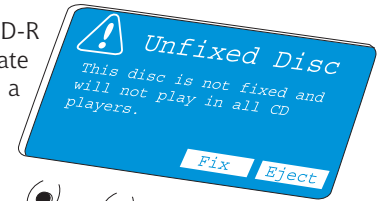

Select "Fix" so that the CD can be played on most conventional CD players.

Select "Eject" to remove the CD without fixing. You will not be able to play the CD in conventional CD players, but you can add tracks to the CD at a later date.

You can keep adding tracks until:-

- you have recorded 99 tracks
- filled the CD (around 80 minutes) or,
- you fix the disc on ejection.

CD-RW discs can be fixed for playback on conventional CD players. They can then be erased for future recording.

Coomber Electronic Equipment Ltd.

1-3 Crucible Terrace, Crucible Business Park, Woodbury lane Norton, Worcester, WR5 2DQ, U.K.

Tel: 0044 (0)1905 342070

e-mail: sales@coomber.co.uk

Fax: 0044 (0)1905 759170

web: www.coomber.co.uk

GH INSTR 6100/3600 FIXING v1.0 02/12/2009

© Coomber Electronic Equipment Ltd. 2009

v1.0 first published 2009